



Please visit our website for the latest mounting options and new products

PED3-Auto™

INSTRUCTIONS

100% made in the U. S. A.



YOU DECIDE MOUNTING OPTIONS

RECOMMENDED! AdPad™-VHB INSTALLATION



CAR MOUNT+

thought out

www.thoughtout.biz

© THOUGHT OUT COMPANY 2008


thought out

www.thoughtout.biz

© THOUGHT OUT COMPANY 2008

INSTRUCT SHT 2008-11-30


INCLUDED MOUNTING OPTIONS

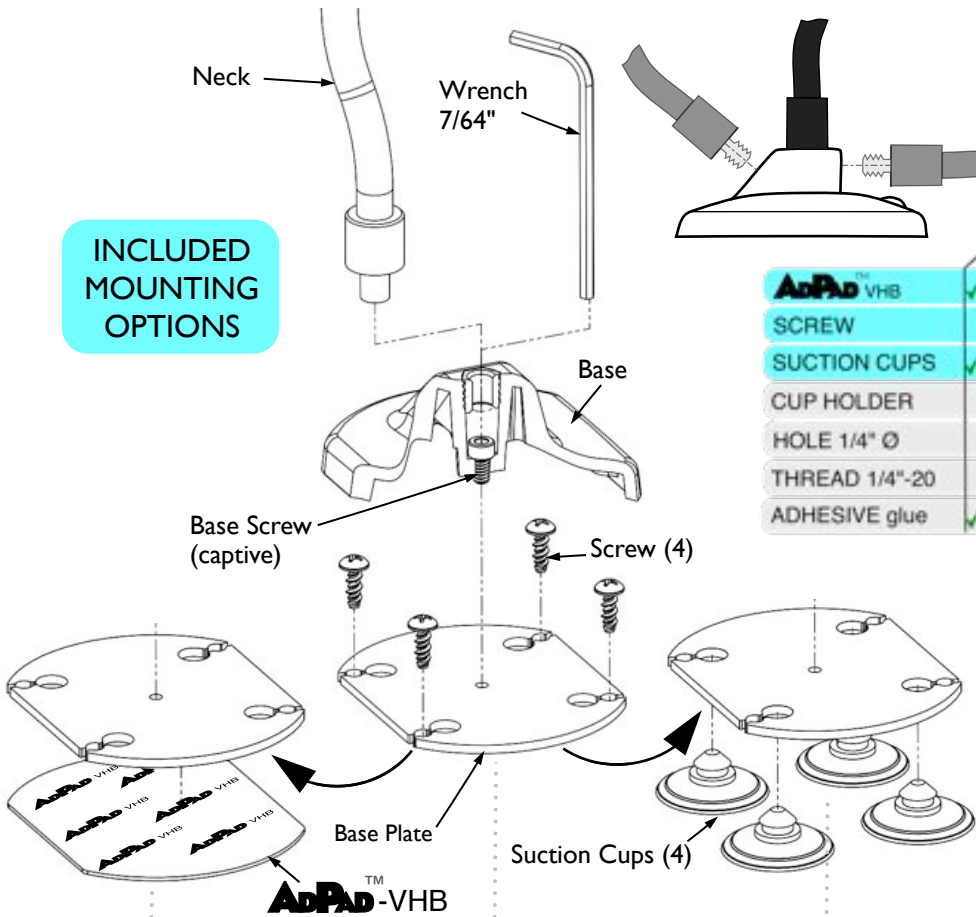

See instructions for AdPad

See instructions for Screws

See instructions for Suction Cups

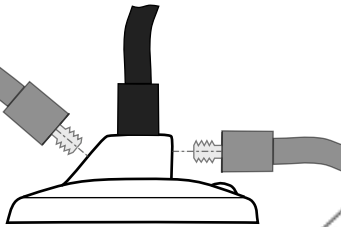

	MOUNTING AREA						
	GLASS	METAL	WOOD	PLASTIC	TILE	PAINTED	CUP HOLDER

AdPad™ VHB	✓✓✓	✓✓✓	✓✓✓	✓✓✓	✓✓✓	✓✓✓	✓✓✓
SCREW	-	✓✓✓	✓✓✓	✓✓✓	-	-	✓✓✓
SUCTION CUPS	✓✓✓	✓✓✓	✓	✓✓	✓✓✓	✓✓✓	✓
CUP HOLDER	-	-	-	-	-	-	✓✓✓
HOLE 1/4" Ø	-	✓✓✓	✓	✓✓✓	-	-	-
THREAD 1/4"-20	-	✓✓✓	✓✓✓	✓✓✓	-	-	-
ADHESIVE glue	✓✓✓	✓✓✓	✓✓✓	✓✓✓	✓✓✓	✓✓✓	✓✓✓

WARNING
 THESE EXAMPLES ARE BASIC GUIDELINES. INSTALLATIONS SHOULD BE PERFORMED BY A QUALIFIED TECHNICIAN.
 Installation of PED3-Auto with its variable location and possibilities imposes many types of risk scenarios. THOUGHT OUT Company cannot be held responsible for installation or use of this product.

thought out
 www.thoughtout.biz
 © THOUGHT OUT COMPANY 2008

AdPad™ -VHB INSTALLATION


AdPad -VHB™ is an aggressive double sided adhesive developed to obtain quick and easy installations onto many materials, including today's low energy surfaces like the slick surfaces (polypropylene, polyethylene, silicone and teflon based, etc) found in car panels and dashboards. AdPad-VHB continues to work on traditional materials like glass, metal, wood, painted surfaces etc.

Using the AdPad along with this required installation method is a must to achieve a solid installation and to give this method a fair chance to work on advanced materials.


Must be
50° to 120° F
Warmer is better




Choose a location for your AdPad installation.

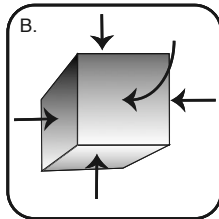


Choose a flat surface where you would like to adhere the AdPad.

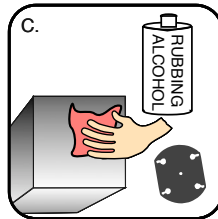


Thoroughly clean the area and surface of base plate with household rubbing alcohol (ISOPROPYL ALCOHOL).

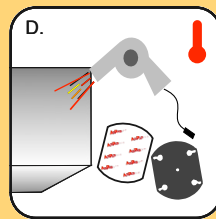


If required, use a household hair dryer to warm all (3) areas to temperature. Maintain temperature through step K.

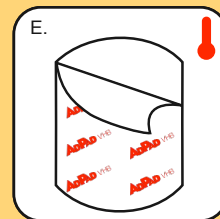


Remove only one skin from a warm AdPad to expose adhesion.

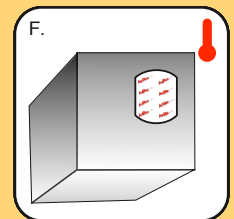


With area cleaned as stated in section C. Align and place AdPad in your selected area.

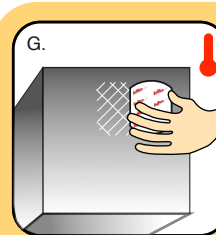


With your fingers, apply firm/hard pressure to the AdPad for 30 seconds, massaging the complete surface to activate the adhesion.

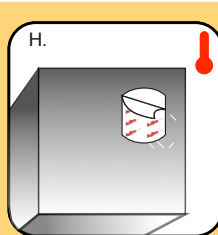


Remove the second skin from the warm AdPad to expose the adhesion.

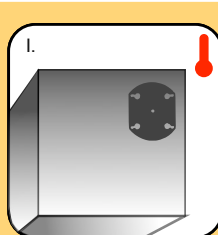


Using a warm clean base plate, align and place over the AdPad.

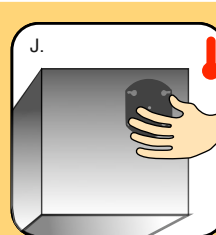

With your fingers, apply firm pressure to the base plate for 30 seconds on all areas of the base plate to activate the adhesion.

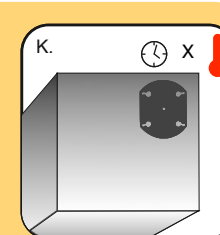

Maintain warm temperature for 10 minutes then continue.

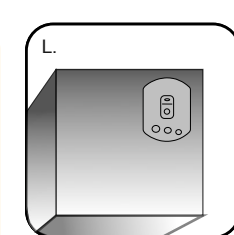


You are now ready to attach the base to the base plate and begin normal use.

REMOVAL: Should you decide to remove the AdPad, any adhesion mark can be successfully removed with glue removers or mineral oil.


Screws

We recommend drilling a test hole and verify the screw fit in an inconspicuous location. Using the base plate as a template mark the 4 small holes and proceed with a 3/32" drill bit (drill bit not included).

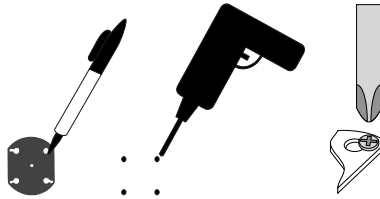


Suction Cups

Using (4) suction cups placed into base plate, wet the cups and push down on a hard flat non-textured smooth sealing surface.

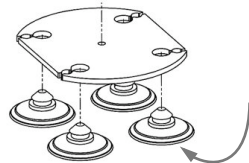


Hole Mount

Without using the base, a 1/4" diameter hole in a thin panel (approximately 1/8" or less can be used with a backing washer and 1/4"-20 nut to hold the neck directly.

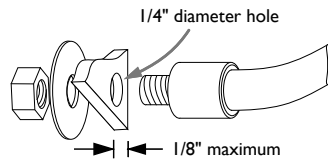


Thread Mount

Without using the base, a 1/4"-20 threaded or tapped hole can be used with the neck directly.

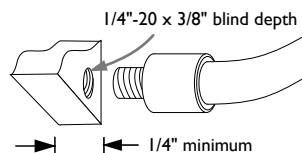


Adhesive Glue Mount

We recommend using Dow Corning 732 Silicone (or other silicone) applying to the manufactures directions in a 1-1/2" diamond pattern to the base plate avoiding all of the holes. Allow to dry double the recommended time (48hrs).

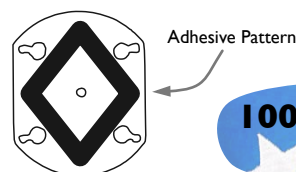

Holder Use and Customizing for Case or Skin

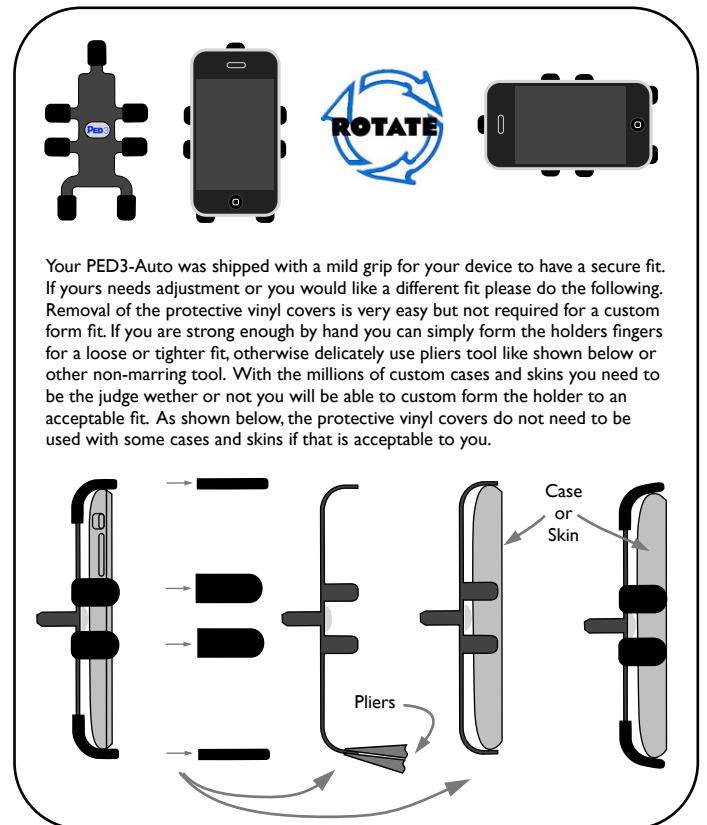

Your PED3-Auto was shipped with a mild grip for your device to have a secure fit. If yours needs adjustment or you would like a different fit please do the following. Removal of the protective vinyl covers is very easy but not required for a custom form fit. If you are strong enough by hand you can simply form the holders fingers for a loose or tighter fit, otherwise delicately use pliers tool like shown below or other non-marring tool. With the millions of custom cases and skins you need to be the judge whether or not you will be able to custom form the holder to an acceptable fit. As shown below, the protective vinyl covers do not need to be used with some cases and skins if that is acceptable to you.

100% made in the
U. S. A.

thought out
www.thoughtout.biz

© THOUGHT OUT COMPANY 2008